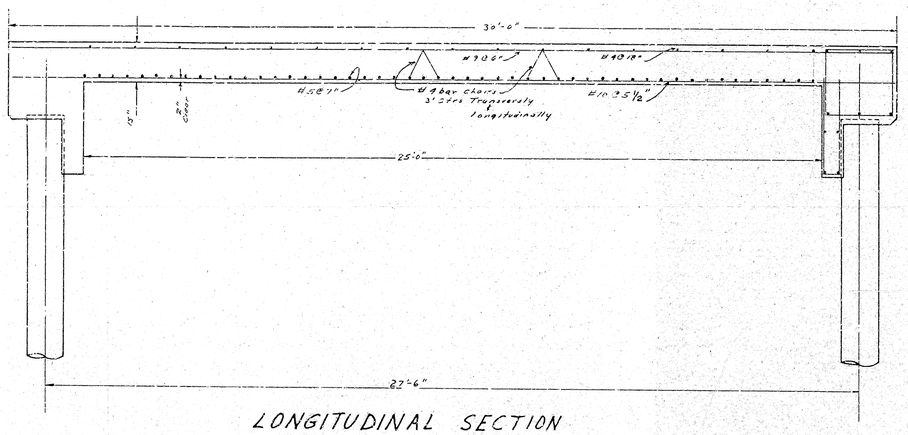

LONGITUDINAL SECTION
scale ½" = 1'-0"

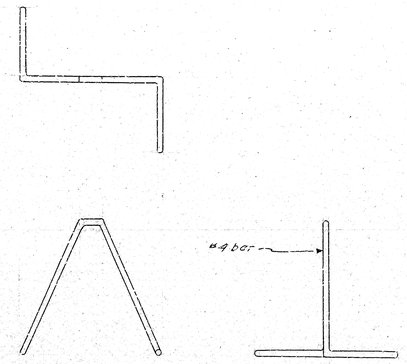

BAR CHAIR
Dimensions to be determined by fabricator

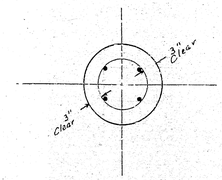

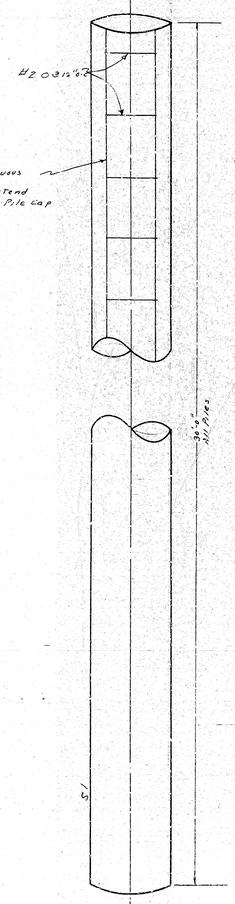

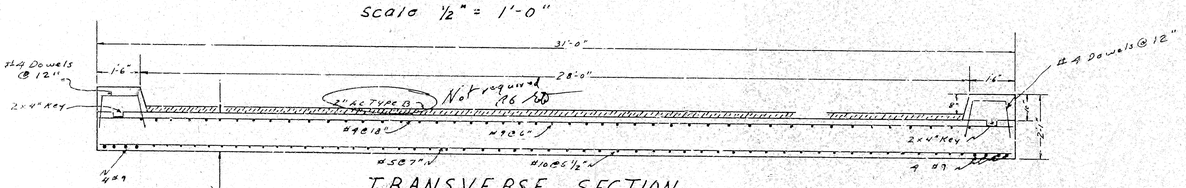

TRANSVERSE SECTION
scale ½" = 1'-0"

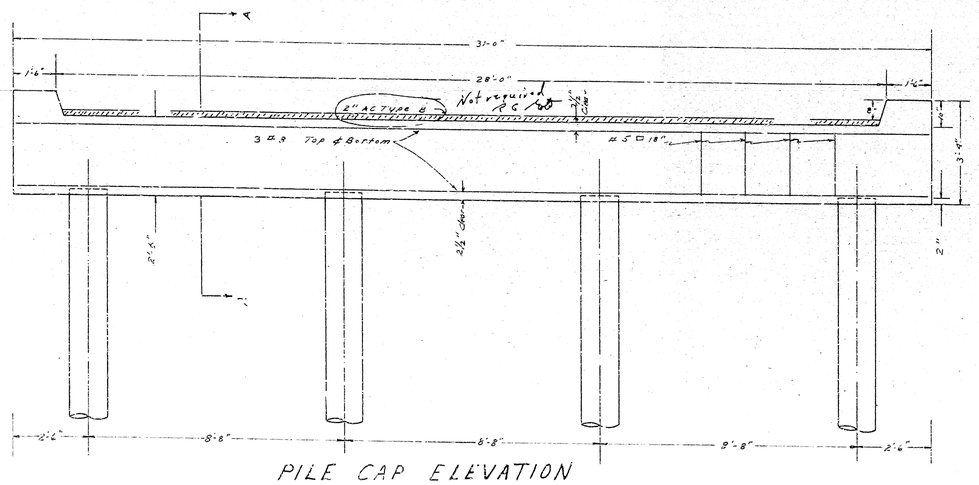

PILE CAP ELEVATION
scale ½" = 1'-0"

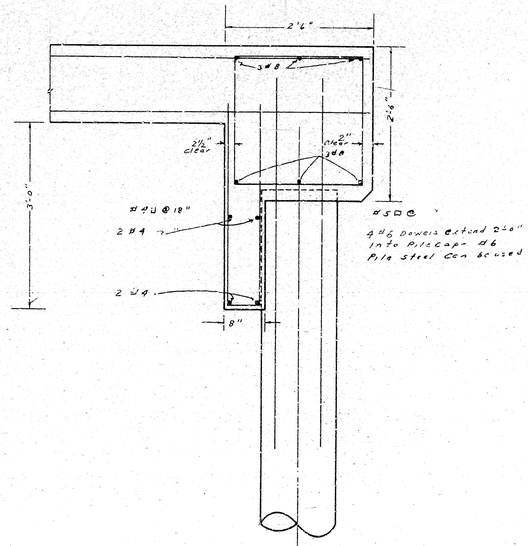

SECTION A-A
scale 1" = 1'-0"

PILE DETAIL
scale 1" = 1'-0"

PILE & SLAB DETAILS

SHEET 2 OF 4 SHEETS | SCALE 1/2" = 1'-0"

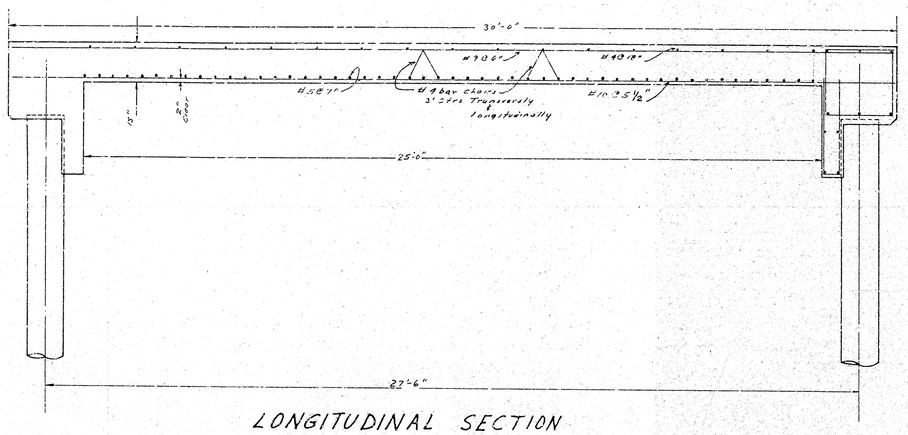

LONGITUDINAL SECTION
scale ½" = 1'-0"

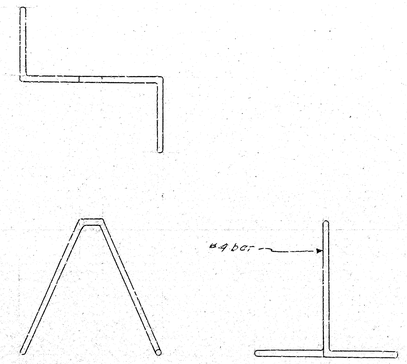

BAR CHAIR
Dimensions to be determined by fabricator

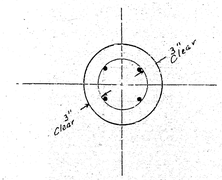

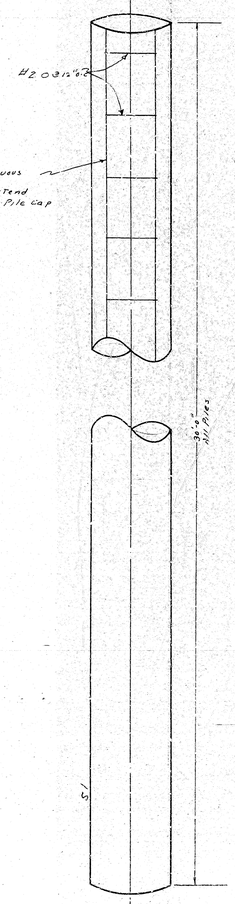

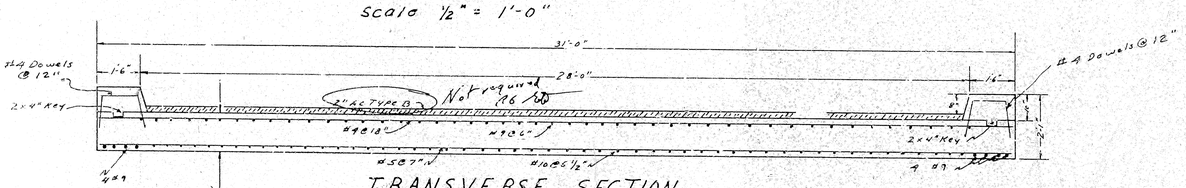

TRANSVERSE SECTION
scale ½" = 1'-0"

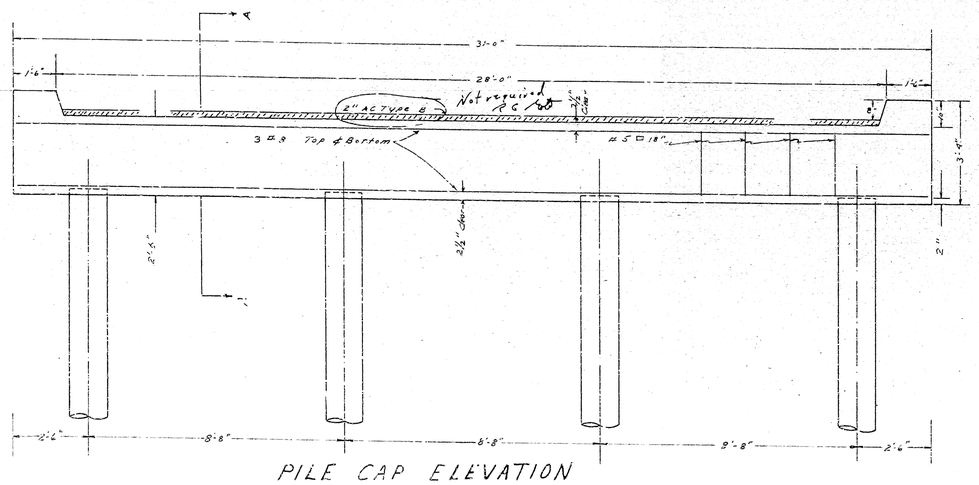

PILE CAP ELEVATION
scale ½" = 1'-0"

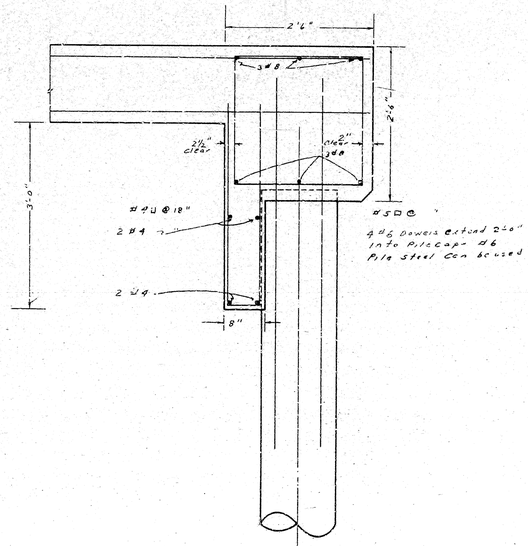

SECTION A-A
scale 1" = 1'-0"

PILE DETAIL
scale 1" = 1'-0"

PILE & SLAB DETAILS

SHEET 2 OF 4 SHEETS | SCALE 1/2" = 1'-0"