


Install 6' cross arms and 2 W3 wires on 9 poles. See interconnect detail.



Install 1' conduit 2" wires from existing pull box up pole. Wiring from pull box to existing controller by others.

Install 1' conduit 2" wires from existing pull box up pole. Wiring from pull box to existing controller by others.

DRAWING No. 2206 ~ SHEET 2 OF 7 SHEETS

Scale ~ 1" = 20'

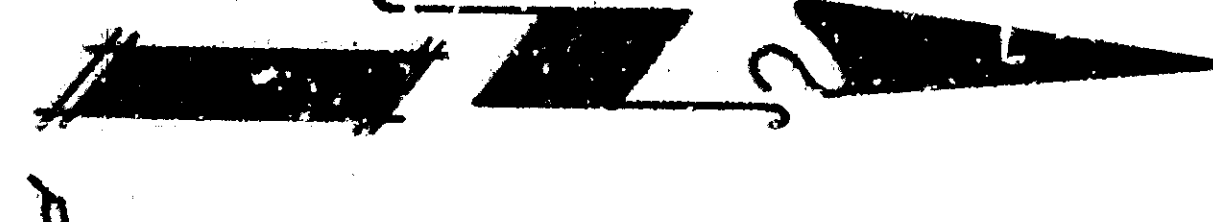

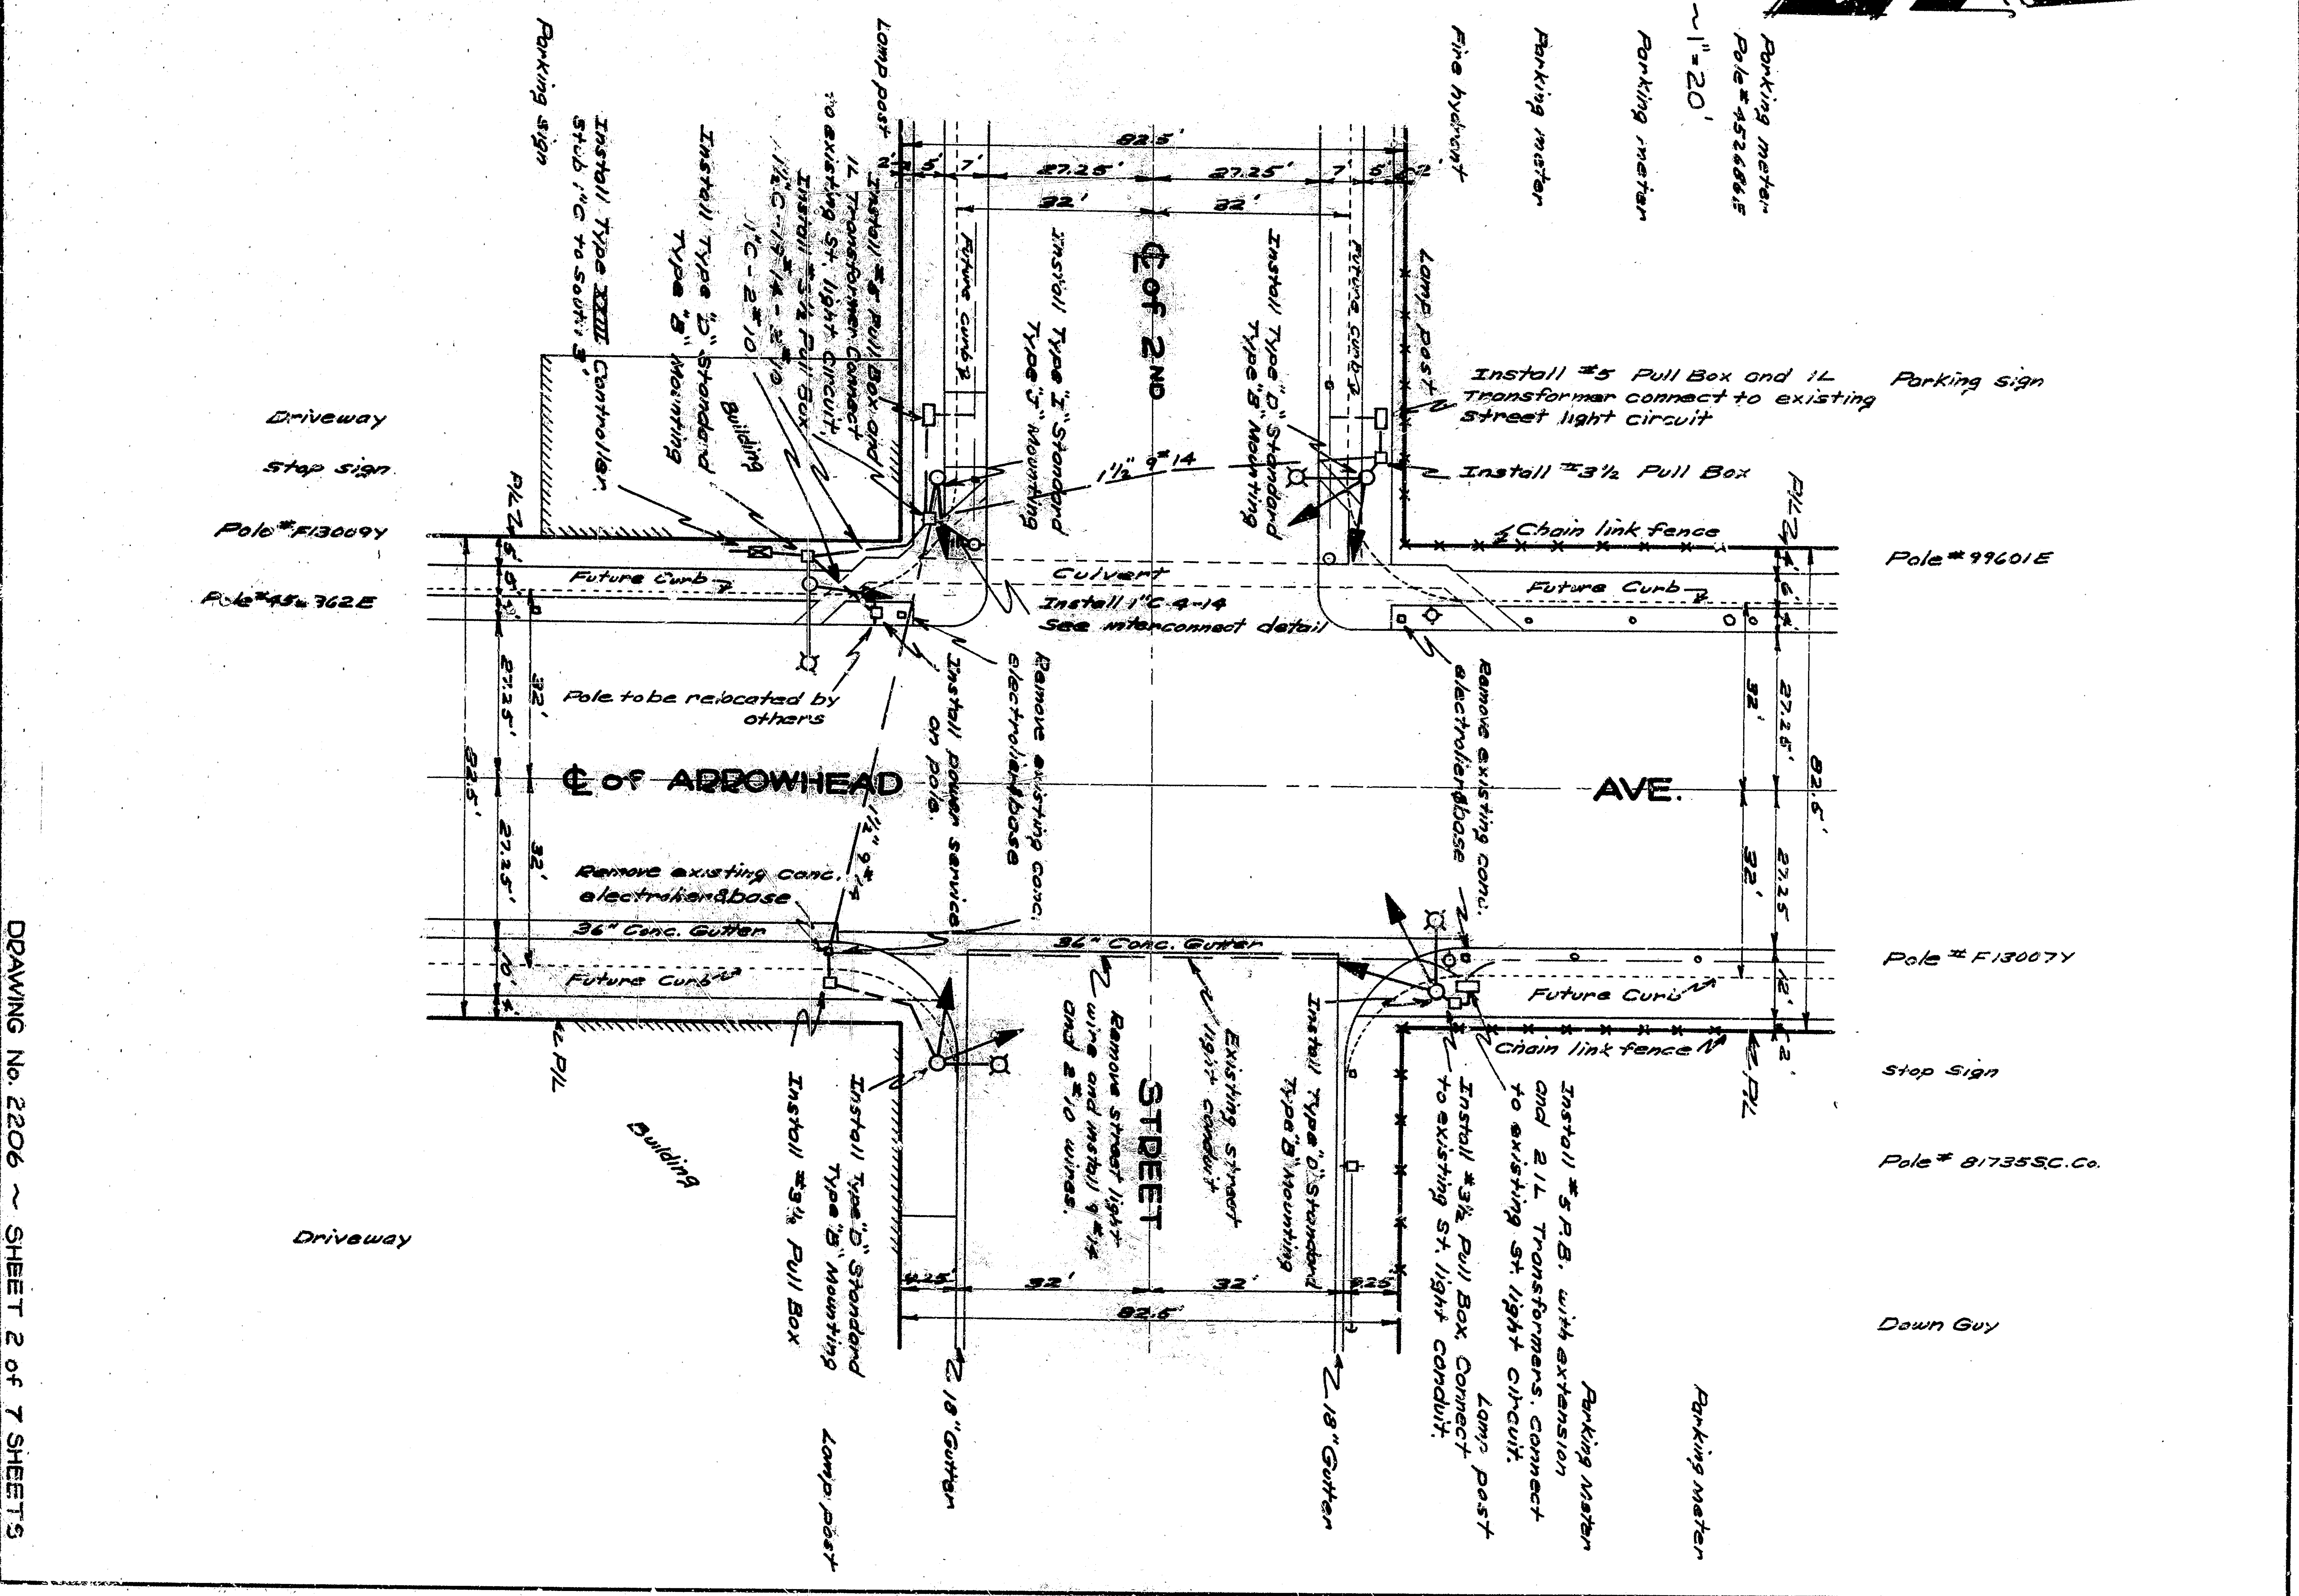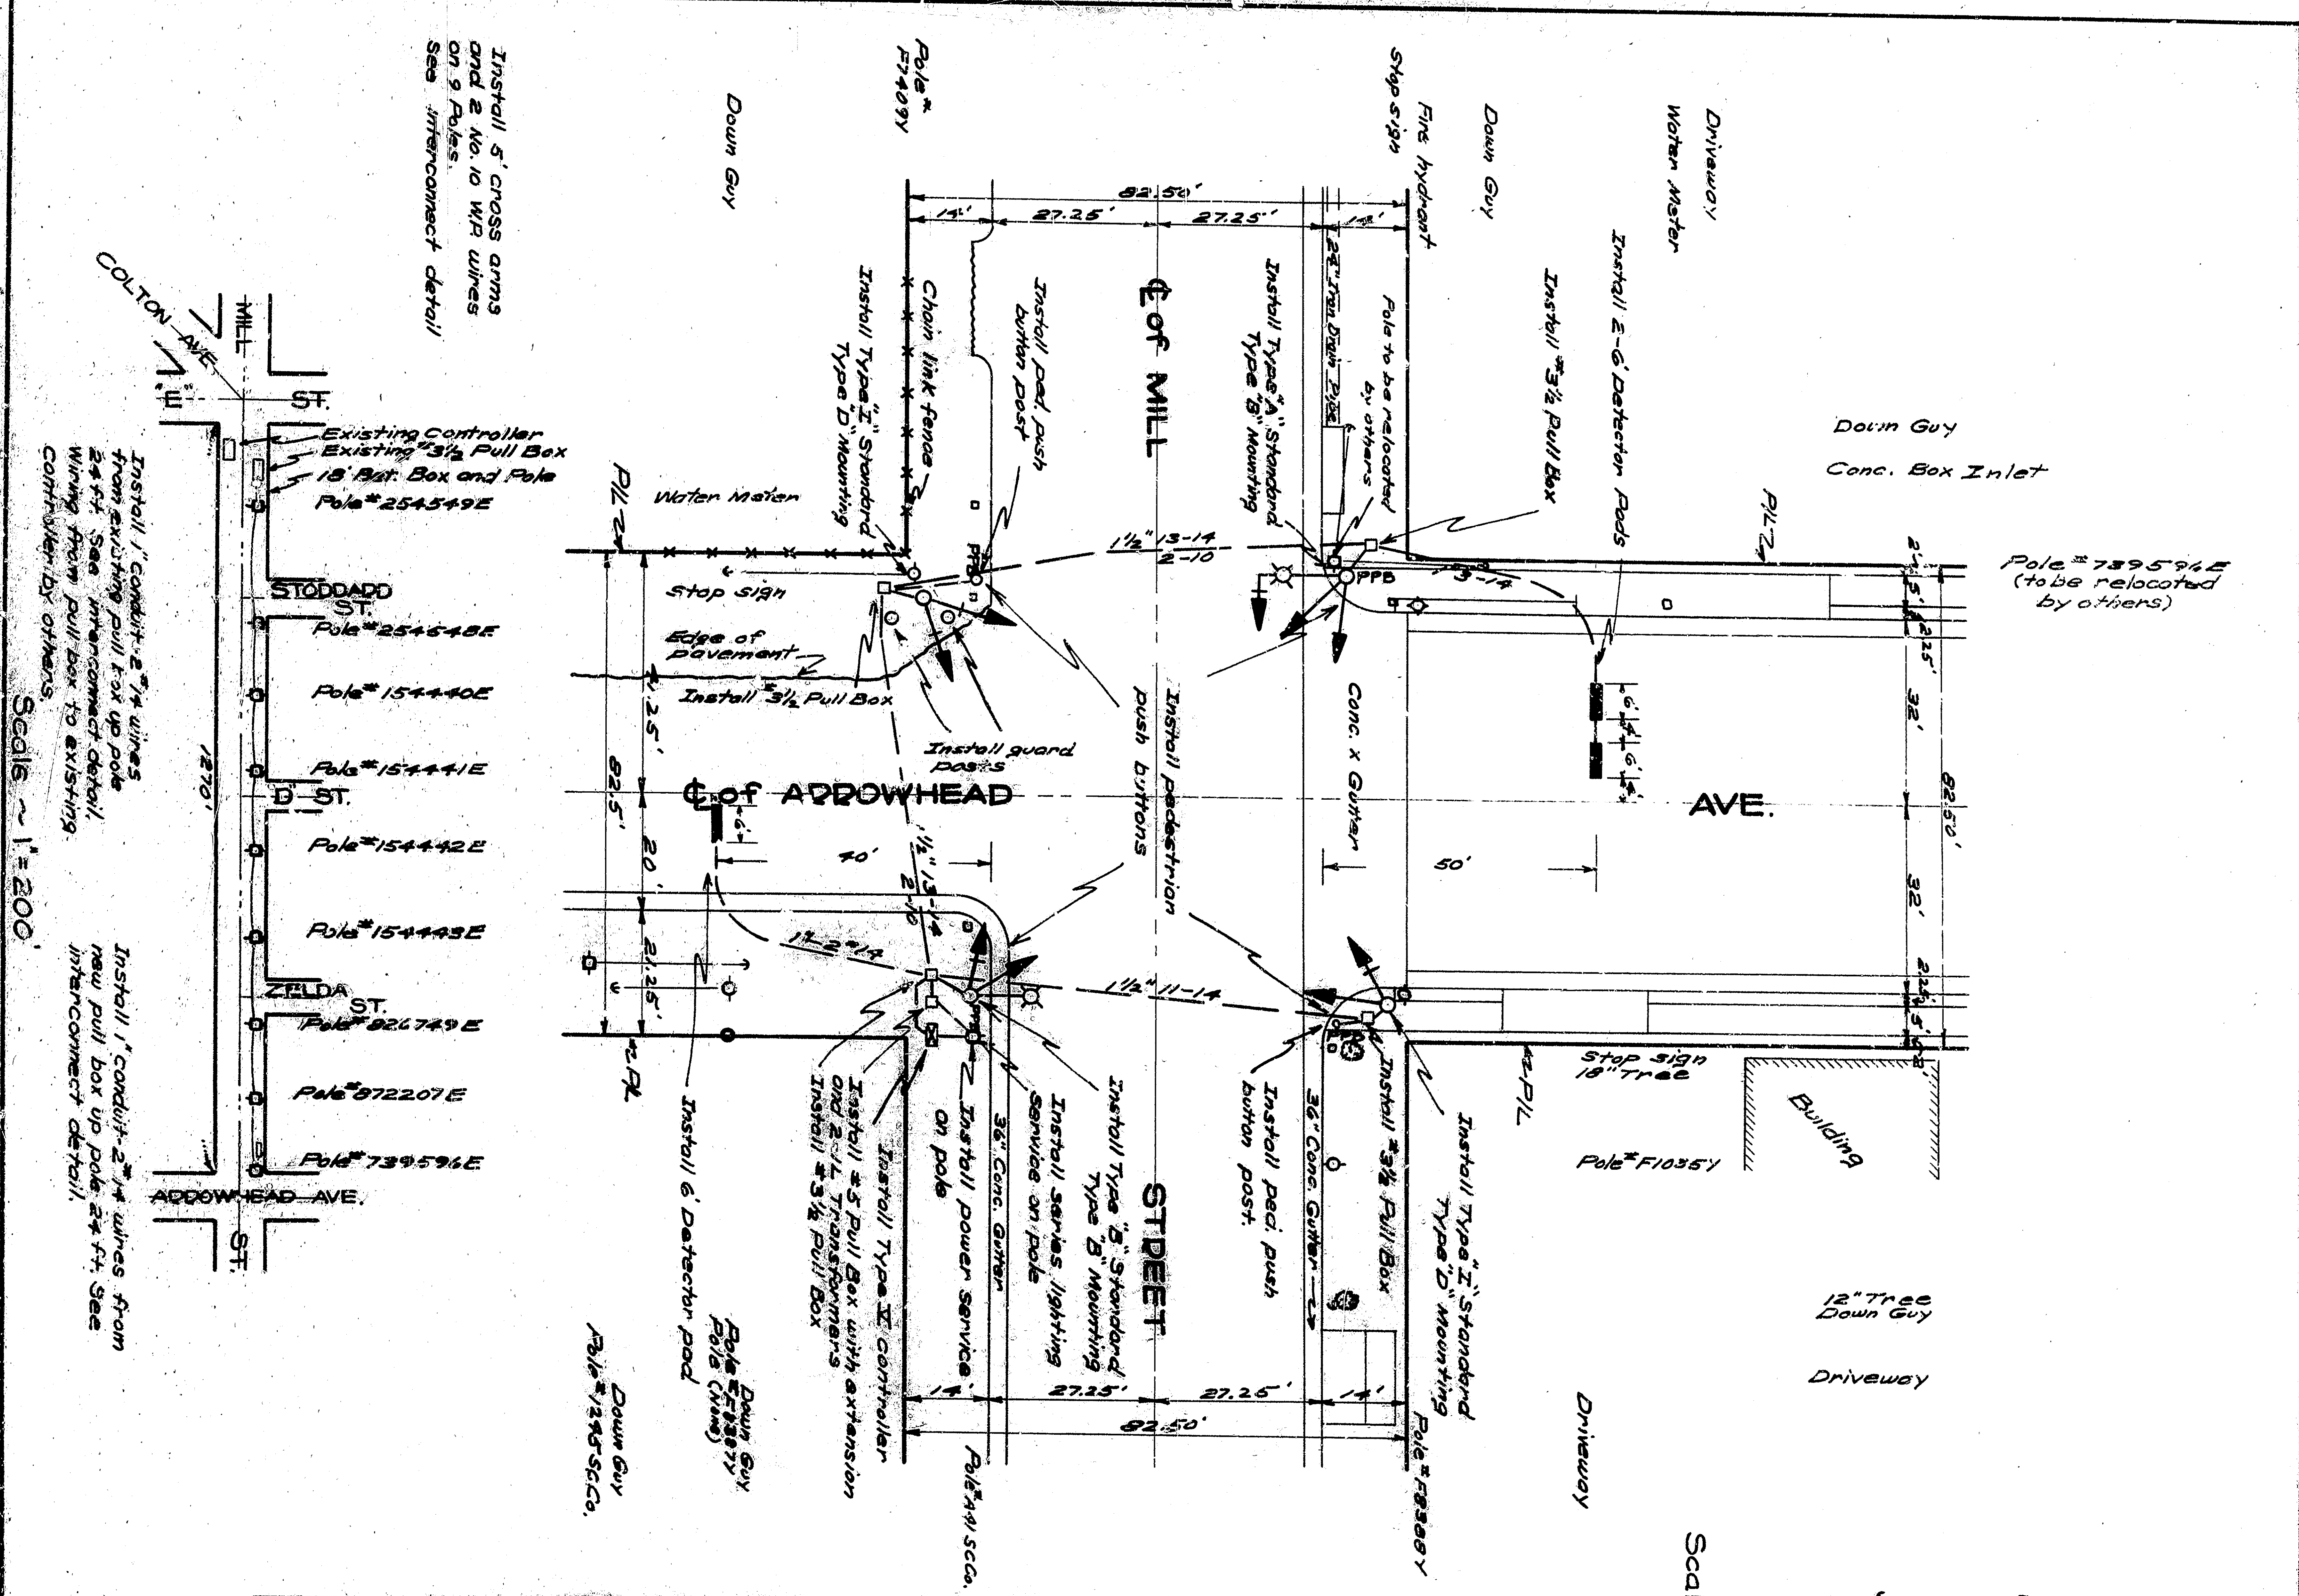

Install 6' cross arms and 2 1/2\"/>

Install 1' conduit 2\"/>

Install 1' conduit 2\"/>

DRAWING No. 2206 ~ SHEET 2 of 7 SHEETS

Scale ~ 1" = 20'

