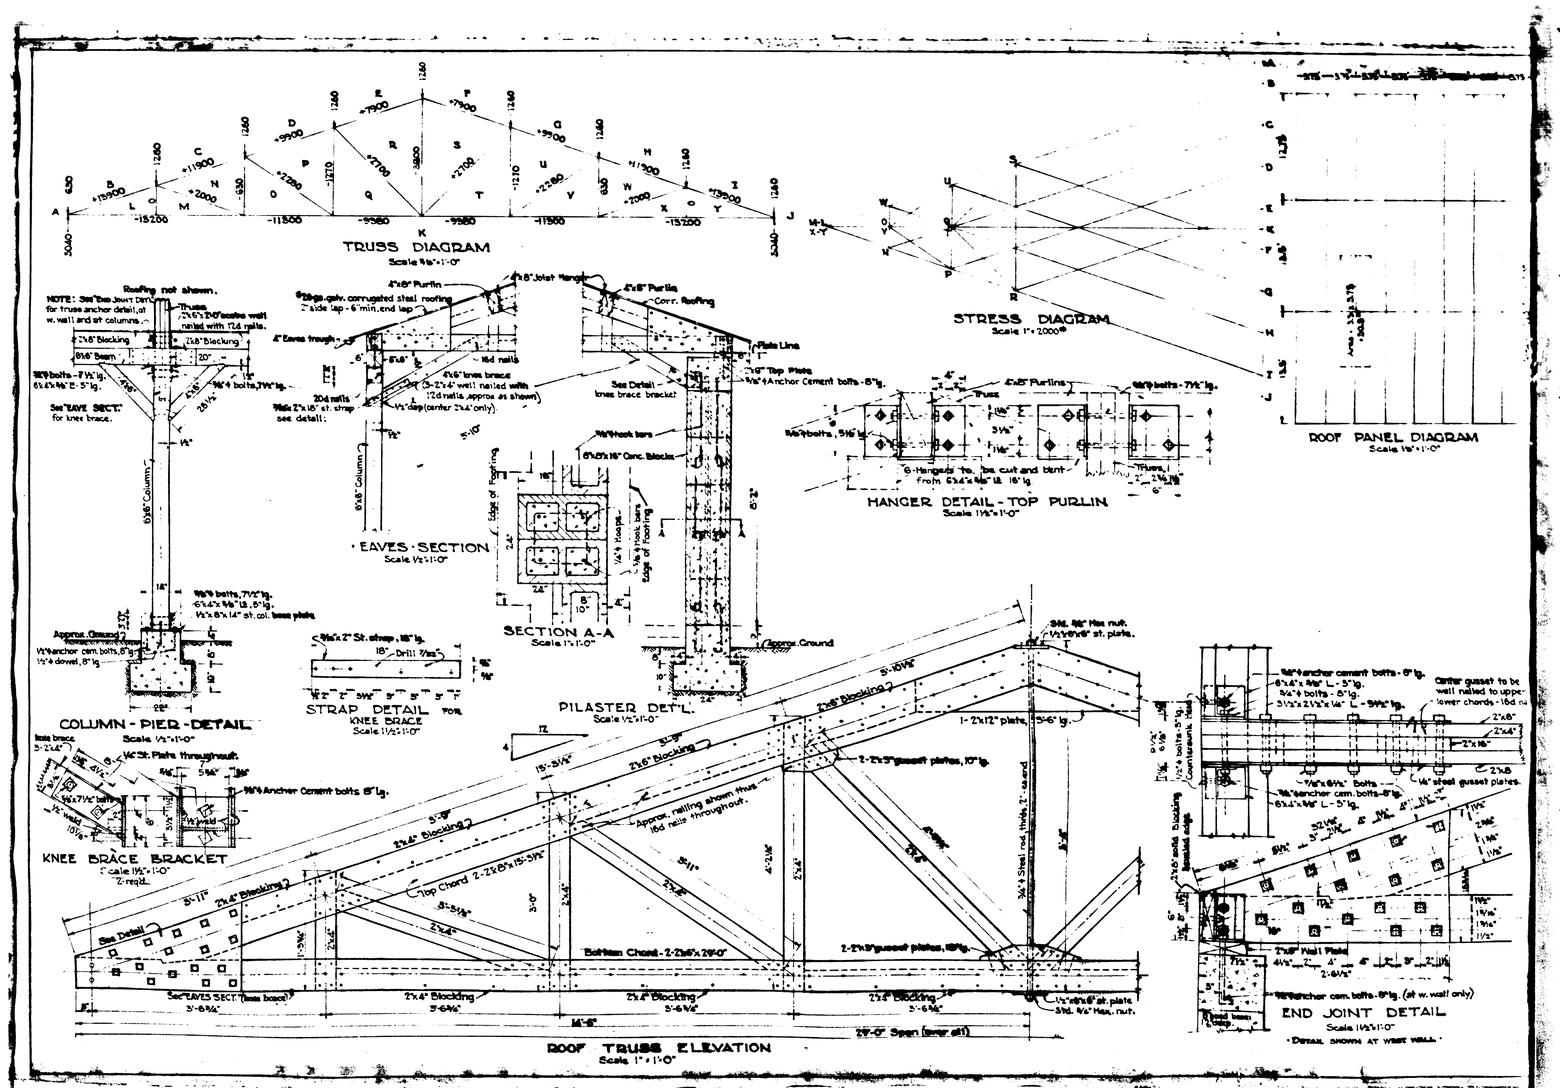
TRUSS DIAGRAM
Scale 1/16"=1'-0"
STRESS DIAGRAM
Scale 1"=2000#
ROOF PANEL DIAGRAM
Scale 1/8"=1'-0"
HANGER DETAIL - TOP PURLIN
Scale 1 1/2"=1'-0"
EAVES SECTION
Scale 1/2"=1'-0"
SECTION A-A
Scale 1"=1'-0"
COLUMN - PIER - DETAIL
Scale 1/2"=1'-0"
STRAP DETAIL FOR KNEE BRACE
Scale 1 1/2"=1'-0"
PILASTER DET'L.
Scale 1/2"=1'-0"
KNEE BRACE BRACKET
Scale 1 1/2"=1'-0"
2-reqd.
END JOINT DETAIL
Scale 1 1/2"=1'-0"
ROOF TRUSS ELEVATION
Scale 1"=1'-0"
Roofing not shown.
Top Chord 2-2x8"x15'-5 1/2"
Bottom Chord - 2-2x6"x29'-0"
29'-0" Span (inner edge)
14'-8"